

# Tehama System (3rd Gen.) Installation Overview

# **General Description**

The Tehama AMR system consists of three device types to remotely monitor various environmental and utility readings and provide the data to a central database or PC for formal presentation and reporting. Metering Data Transceiver (MDT TW-111 and TW-112) devices will be placed in all locations requiring local monitoring of data. The MDT devices will transmit time stamped data to the DCAP device (DCAP TW-222), which receives the data and stores it in a Database. The database information is available over Ethernet on the local LAN or the Internet. For MDTs that are out of range from the DCAP, Repeater devices (RPT TW-222) are added in appropriate locations to relay the data between MDTs and the DCAP.

The system operates in the 915MHz ISM bands using off-the-shelf Semtech RFIC radios. The system operates either as a FHSS over 60 narrow band frequency channels, incorporating a bidirectional communication link with Acknowledge (ACK) messages to ensure all data reaches the DCAP or as a DTS non-hopping spread spectrum with 842kHz Bandwidth. The MDTs are battery operated, bursting data packets at pre-programmed times then shutting down to conserve battery life, estimated to exceed 5 years. The DCAP and Repeater units are line powered.

With a typical MDT transmission rate of one per hour (four per hour for Time of Use applications), a single DCAP can accommodate up to 1000 MDTs. There is no limit to the number of repeaters, though an average installation where MDTs are spread out in each living space will require one Repeater for every 20-30 MDT/MDTs.

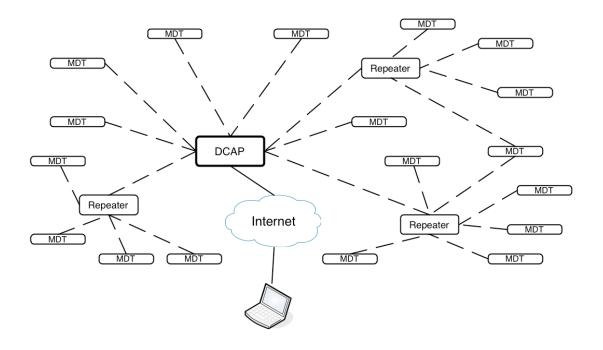


Figure 1: Typical System





A system consists of two or three types of hardware, and a software program:

- A DCAP Unit
- A variable number of MDT units, each with 2 AA batteries
- A variable number of Repeater units (optional, depending on size of installation) with external DC power supply.
- Tehama Configuration Utility (CIT) running on a PC

# Warning

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT



# **Tehama Configuration & Installation Tool (CIT)**

You should have received a copy of the Tehama Configuration and Installation Tool (CIT) software. If not, please contact <a href="mailto:support@tehamawireless.com">support@tehamawireless.com</a> and request the link. The CIT runs on a Windows based PC. More detailed information can be found in our training class materials or the Tehama QuickStart Guide available on our web site.

The tool can be run on the PC either prior to or during a site installation, or when new MDTs are added to a system. The tool is used to add configuration data to the database. Examples of configuration data include the name, type, and location of equipment an MDT is connected to, and alarm trigger settings for the different MDTs.

## **Data Collecting Access Point (DCAP) Setup**

This step configures the Internet settings for the DCAP and lets you set unique passwords for remote access.

- Screw in the Antenna that came with the unit.
- Power up the DCAP with the supplied power adaptor.
- Attach the DCAP to your local LAN with the supplied Ethernet cable.
- Launch the CIT tool on the PC
- If a static IP or non-default passwords are desired, attach the supplied USB cable to your computer and to the DCAP. If this is the first time attaching to a DCAP, Windows may respond with a "found new hardware" message. Follow the steps to let Windows download the driver software. Your PC will need to be connected to the Internet to download the drivers.
  - Go to the DCAP -> Configure via USB menu item. The Serial Port field should be automatically populated with the correct COM port
  - Click on the Get button to see the current settings
  - DCHP (Dynamic IP Address) is the default. If you want a static IP, select static and fill out the extra fields.
  - Set the MySQL database passwords for both users and click "Set". Clicking on the "Default Vals" button will fill the fields with the factory default passwords. This is provided as a convenience if password security is not an issue (for example in an evaluation system).
  - Click on the "Create a Site Entry" button to auto-fill a Site entry with the information from this panel.
  - Unplug the USB cable. It is not needed again unless you need to change the IP address or the database passwords at a future time.



## **MDT Configuration**

All MDT come from the factory with a default factory-set configuration; there is no user changeable setup of an MDT. It need only be connected to the meter and turned on. A number of different MDTs are available, our most popular being a single pulse input unit with a one-hour transmission interval. See our web site for other variations available.

MDT and Repeater devices come from the factory in a powered off state. They can be powered on using a hidden button under the Tehama Wireless logo.

The big circle in the photo below shows where the hidden button is located on the enclosure. It may take a few times to get the feel of the button, but an LED to the left gives you feedback when the button is pushed.

LED

Button

# Turn ON or Off (MDT only):

- Press & hold button until LED blips off, then release.

#### Power-up LED Flashing:

- Listening for DCAP or Repeater: LED flashes slowly
- Trying to Connect to DCAP: Flashing changes from slow to fast
- Successful Connection: LED stays solid for 10 seconds.
- If NOT successful, LED goes out without the 10 second on

Check the status of an MDT or Repeater by tapping the button

- Unit is OFF: Two flashes after button is released
- Unit is Asleep and NOT connected to Network: One flash only
- Unit will wake up within one hour and try to re-connect to Network. This is usually an indication of poor placement or inadequate Repeater coverage.
- Unit is Connected and operating normally: LED on for 10 seconds
- Green is good link, Orange an OK link, Red is poor link

**Reset Count (MDT Only):** Press and hold button until power-up flashing sequence starts (12-15 seconds)

#### **MDT** to Meter wiring

Refer to our many wiring diagrams on our <u>web site</u> for wiring instructions from the many different meters available.

#### **Device Placement**

Warning: All radio devices should be placed at least 8 inches (20 cm) away from people in order to minimize RF exposure.



With the DCAP Unit powered up, the repeater backbone should next be placed. Start with units closer to the DCAP/AP, and use the LED feedback indication to verify the range is acceptable. At first just the minimum numbers of repeaters can be placed, and it is necessary that they be within range (solid 10 second LED "flash" when button pushed) for the backbone to be reliable. Repeater to Repeater (or DCAP) range in open field scenarios is in excess of 1/2 mile, however building construction materials, terrain, and poor location choices can reduce this down to hundreds of feet or less.

Once the initial Repeater placement is complete, the MDT placement phase begins. Again the LED feedback can be used to verify that MDTs are communicating with the network. Additional repeaters can be placed in areas where MDTs are unable to connect to the backbone. MDT to Repeater (or DCAP) range in open field scenarios is in excess of 1500 feet, however building construction materials, terrain, and poor location choices can reduce this down to a hundred feet or less.

The CIT software can also be used in the placement phase to provide more detailed information such as Link Quality and Signal Strength readings generated by MDT and Repeaters.

# **Mounting Guidelines**

Units should never be placed directly on a metal surface or within a metal enclosure. Mounting on a metal surface will <u>significantly</u> affect the radio performance of the device, be it an MDT or a Repeater.

# Recommended placement

- Mount on nearby wall away from meter and copper /metal piping or conduit.
- RF performance is best when mounted on wallboard
- Use keyhole shape to mount on screw in wall
- Designed for #6 Drywall screw
- Separate case to tighten screw if desired
- Note Antenna Pattern shown on the right.
- Radio signal slightly attenuated along the long axis of the MDT case





# FCC/IC Compliance information for MDT TW-111, MDT TW-112, RPT TW-222 and DCAP TW-222

#### Users in the US

The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

#### **Users in Canada**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

# Pour les usagers résidant au Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

#### Contact:

Tehama Wireless

2607 7th Street, Suite G Berkeley, CA 94710 415.495.7344 info@TehamaWireless.com www.TehamaWireless.com Made in USA

©2017 Tehama Wireless Design Group Rev.1709

